


# Instructions

## Contents



Chair Rail MX™

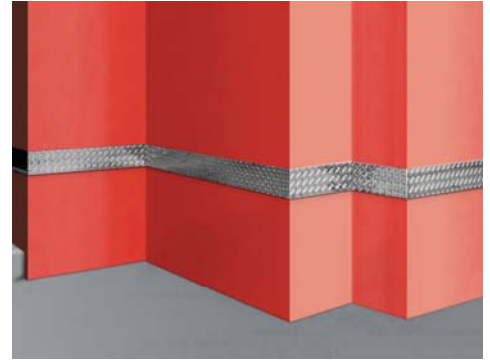

Chair Rail MX™  
P/N: HCRA.LL

## Installation Instructions



"A"
4"
6"
8"

1. High-Flow bonding tape on back side
2. For best adhesion, wall should be clean and free of oil, moisture and dust and should be approximately 60 degrees Fahrenheit. A hair dryer may be used to warm up wall surface if needed.
3. Peel off paper liner and press Base Molding MX™ to the wall. Use firm and even pressure to secure bond.
4. Do not keep the adhesive exposed to the air for more than a minute as the adhesive will begin to dry immediately and adhesion strength will decrease.
5. For easiest positioning of product, make contact with one corner of the product first and then let the entire product make contact.
6. Once the entire product has made contact, immediately use a rolled up rag or towel and apply good pressure over the entire product to adhere it. It is important to apply this pressure immediately otherwise any existing air gaps will immediately begin to dry the adhesive.
7. For best cutting results on aluminum, use saw blades designed to cut 1/16" thick metal (also known as "sheet metal").
8. For best cutting results on stainless steel, use a low speed saw and use a saw blade designed to cut 1/16" thick metal (also known as "sheet metal").
9. If walls are bowed, product may lift off wall after some time. Fasten product to the wall using either:
  - > liquid adhesive: cyanoacrylate ("super glue" type) or an epoxy type
  - > small finishing nails: for best results, hammer finishing nails into wall at slight angles. One finishing nail per corner is adequate. Pre-drilling holes are optional
10. CAUTION: Even though a freshly painted wall feels dry to the touch, it may not be fully cured. Freshly painted walls can continue to evolve volatile oils (VOC) for weeks which will reduce the adhesion bond strength significantly and cause the product to lift off wall after some time. Consult your paint supplier to determine adequate cure time for the type of paint used and room environment present. Depending on the brand of paint, 8 week cure times are not uncommon. To re-attach product to wall, use a "super glue" type of adhesive or finishing nails as described above.

Any questions or problems, please contact us:

Gupta Permold Corporation  
Consumer Goods Division  
diamondLife™ Brand  
234 Lott Road  
Pittsburgh, PA 15235  
USA  
Ph. 412.793.3511 x103  
Fx. 412.793.1055  
Email. [help@diamondlifegear.com](mailto:help@diamondlifegear.com)  
Store. [diamondlifegear.com](http://diamondlifegear.com)



Find more great Garage Gear at  
[www.diamondlifegear.com](http://www.diamondlifegear.com)

Doing a common thing uncommonly well,  
brings success.

Welcome to the diamondLife.™



### Helpful Hint!

Remove protective plastic film  
after installation



### Helpful Hint!

It is essential with all adhesives that  
the surface to be applied to must be  
clean, dry and free of any contaminat-  
ing influences such as grease and dirt.