

Instructions


Contents

1. PegBoard HB™
2. Self-Stick Spacer™:
 - Spacers
 - Adhesive Dots








Installation Instructions

1. Fasten onto wall using peg hook holes for mounting
2. Locate mounting holes onto structural wall components (ie wall studs) wherever possible.
- 3. Use holes shown in red in illustrations below.
- ⊙ 4. Use any remaining holes for mounting into structural wall components (ie wall studs) - shown in green in illustrations below.
5. Use as many structural wall components (ie wall studs) as possible.
6. Remove clear plastic liner from adhesive dots.
7. Press spacer to adhesive dot, then press spacer to desired location on PegBoard HB™
8. Do not over tighten screws.

Fastening into wall stud

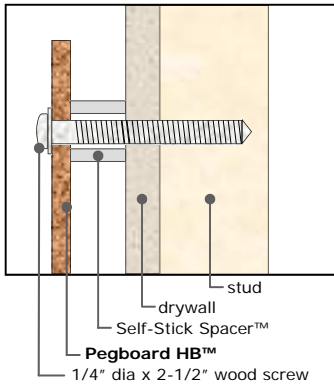

Fastening into hollow wall

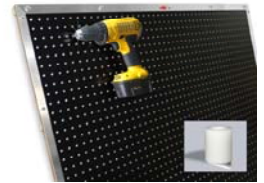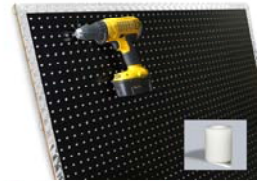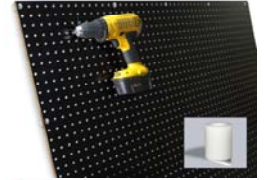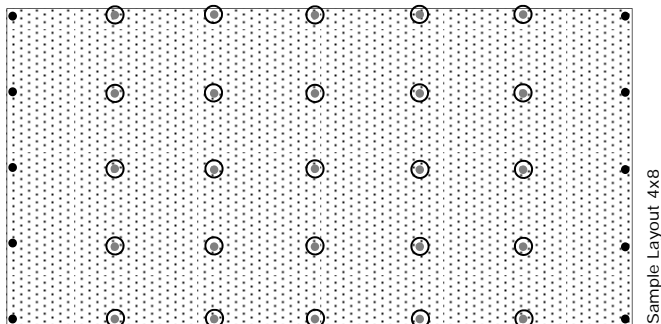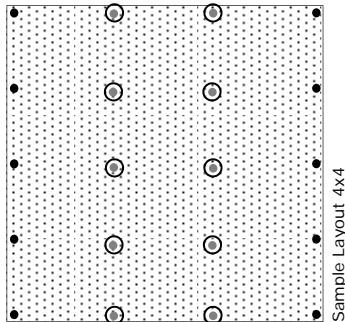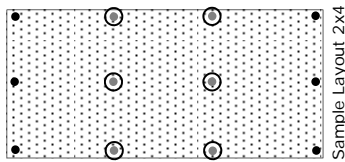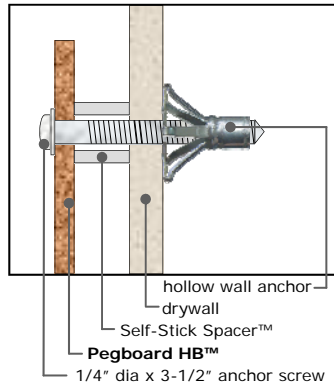

PegBoard HB™
P/N: HPBW

Any questions or problems, please contact us:

Gupta Permold Corporation
Consumer Goods Division
diamondLife™ Brand
234 Lott Road
Pittsburgh, PA 15235
USA
Ph. 412.793.3511 x103
Fx. 412.793.1055
Email. help@diamondlifegear.com
Store. diamondlifegear.com



Find hundreds of more great work space enhancement products at www.diamondlifegear.com

Accessories

