

Instructions




Installation

1. Thank you for your purchase of BANGuard Impact Protectors. For good performance, please follow the installation instructions below.
2. For good adhesion, the surface onto which the BANGuard Impact Protector is to be mounted should be clean and free of oil, moisture, and dust. The temperature of the surface should be above 65 degrees Fahrenheit. A hair dryer or similar device can be used to warm up the surface if needed.
3. Cut to desired shape if required with BANGuard cutting accessories sold separately.
4. Peel off the removable liner from the backside exposing the adhesive surface.
5. Press to mounting surface and apply firm pressure all over to achieve best adhesion.
6. Recommended for indoor use only and light duty applications.

Cutting

1. Use Soft Grip Rotary Cutter (#BGROTCUT) and Self Healing Cutting Mat (#BGCUTMAT) sold separately
2. Place Cutting Mat on flat sturdy surface
3. Place BANGuard Impact Protector onto Cutting Mat with adhesive side down and color side up
4. Use a straight edge and line up cut
5. With firm even pressure roll the Cutter smoothly thru the Impact Protector. Practice on scrap pieces to learn technique
6. If done properly, the cut edge of Impact Protector will be clean and smooth
7. After time, some adhesive may build up on cutting blade. Clean off with standard paint thinner or xylene which can be found at your local hardware store.
8. Replacement Blades (#BGCUTBLD) are available by calling 412.793.3511 x104.

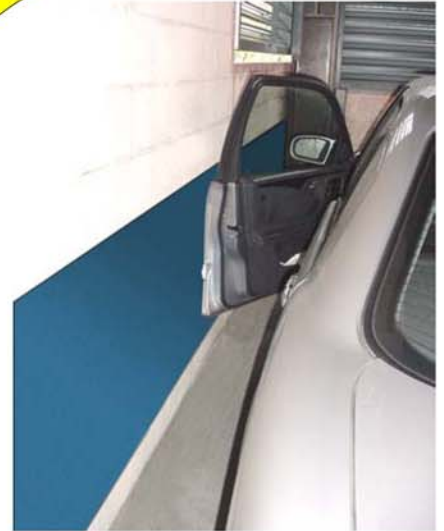

Any questions or problems, please contact us:

Gupta Permold Corporation
Consumer Goods Division
BANGuard Commercial Products
234 Lott Road
Pittsburgh, PA 15235
USA
Ph.412.793.3511 x103
Fx.412.793.1055
Email.help@diamondlifegear.com
www.diamondlifegear.com



Find more great Garage Gear
at www.diamondlifegear.com