

Instructions


Contents

1. PegBoard X1™
2. Self-Stick Spacer™:
 - Spacers
 - Adhesive Dots



Installation Instructions

1. Fasten onto wall using peg hook holes for mounting
2. Locate mounting holes onto structural wall components (ie wall studs) wherever possible.
- 3. Use holes shown in red in illustrations below.
- 4. Use any remaining holes for mounting into structural wall components (ie wall studs) - shown in green in illustrations below.
5. Use as many structural wall components (ie wall studs) as possible.
6. Remove clear plastic liner from adhesive dots.
7. Press spacer to adhesive dot, then press spacer to desired location on PegBoard X1™
8. Do not over tighten screws.


Fastening into wall stud

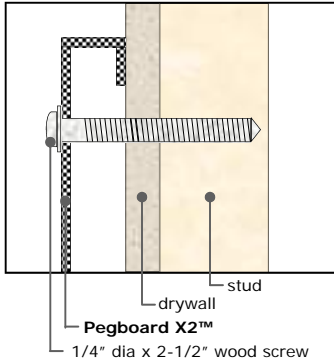


Fastening into hollow wall

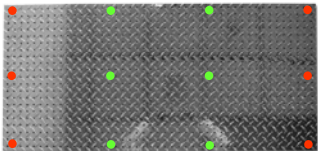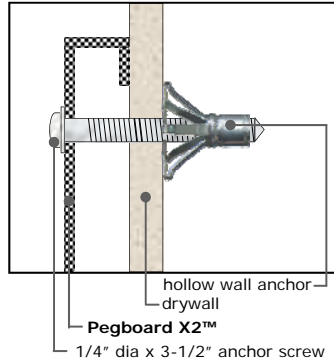

Sample Layout 2x4

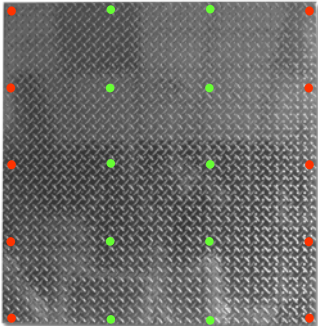

Sample Layout 4x4

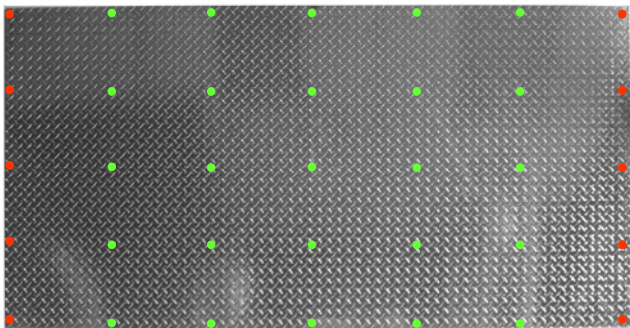

Sample Layout 4x8



PegBoard X1™
P/N: HPBF.X

Any questions or problems, please contact us:

Gupta Permold Corporation
Consumer Goods Division
diamondLife™ Brand
234 Lott Road
Pittsburgh, PA 15235
USA
Ph. 412.793.3511 x103
Fx. 412.793.1055
Email. help@diamondlifegear.com
Store. diamondlifegear.com



Find more great Garage Gear at
www.diamondlifegear.com

Doing a common thing uncommonly well,
brings success.

Welcome to the diamondLife.™



Helpful Hint!

Remove protective plastic film
before installation

Accessories



Peg Hooks



Baskets



Bins



Organizers



Mounting Fasteners



Self-Stick Spacers™